


Fat Boy Silencer Repacking: Quiet or Standard

Please begin with the following instructions:

(If at any time throughout this process you have any questions, please call us at (619)258-6306 Tues.-Fri. 7:00am-5:00pm PST.)

1. Remove (3) Allen head screws from rear of silencer body.
2. Remove end cap/core combo and old packing.
3. Clean inside of silencer, removing carbon and packing material left; use sandpaper, soft wire brush or you can bead blast.
4. Take core and core packing, rap packing around core starting and ending at the same point, making sure packing seam is located at bottom before insertion. Example: using a clock-start packing at 6 (bottom) and rap around until meet at 6 again. When installing core with packing into silencer, make sure flange end of core is at the rear of silencer. Core must slide into inner collar inside silencer.

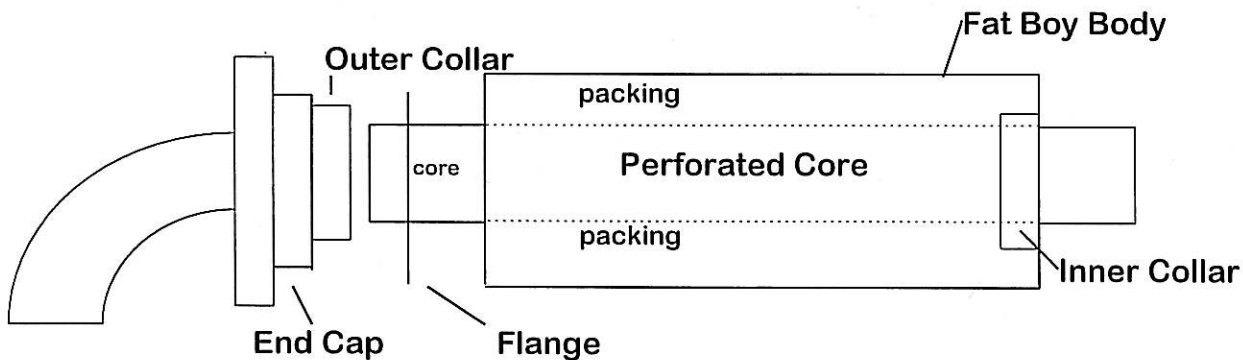

5. After core and packing are installed properly, install end cap, *to install end cap properly-please note: hole is not centered, make sure small end of cap goes to the top of silencer, core must go into outer collar of the end cap. Line screw holes up, install screws, being careful not to over or under tighten screws. Note: if holes fail to line up, a small rat tail can be used to enlarge holes.
6. Remove old Fat Boy decal, clean and install new Fat Boy decal.

SPECIAL NOTES:

1. For maximum performance and minimal sound it is recommended to repack every 6-10 hours.
2. Use only DR/PTR Fat Boy repacking material in your Fat Boy Silencer. Use of another manufacturers packing material or household insulation could cause damage to your Fat Boy Silencer. Fat Boy packing is designed to offer the silencer the correct amount of material for optimum performance. Over or under packing your Fat Boy with another material can lead to as much as a 15% loss in overall power.